


GMS 10.2 Tutorial

MODFLOW – PEST Pilot Points

Use pilot points with PEST to automatically calibrate a MODFLOW model

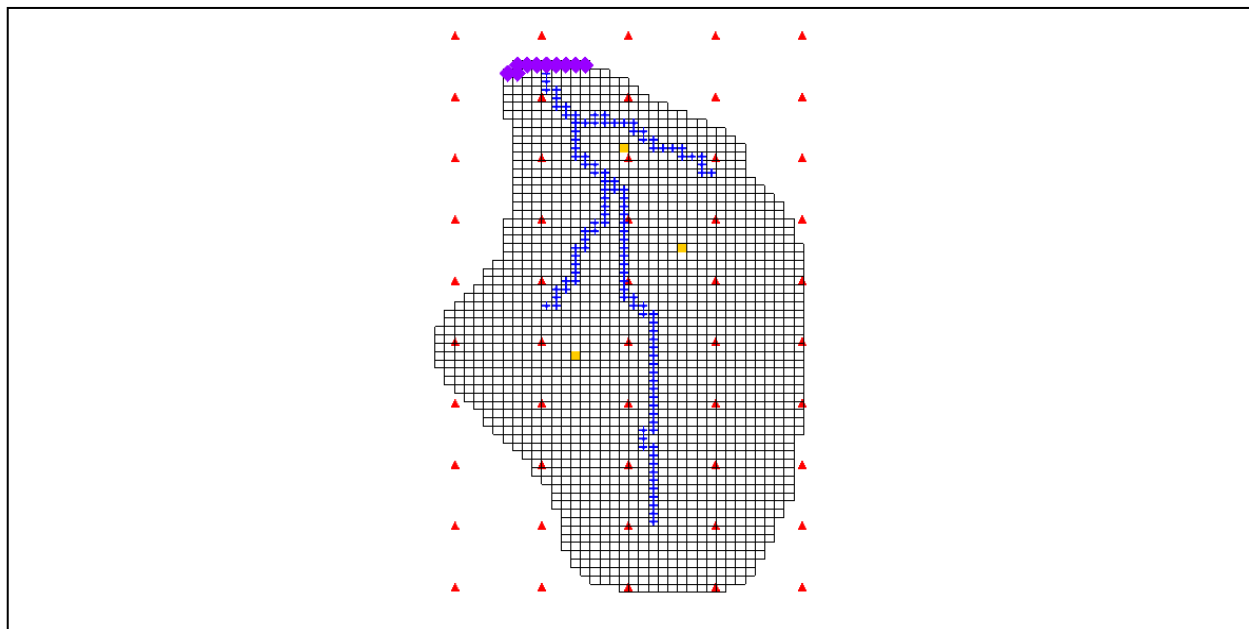

Objectives

Learn the features and options related to pilot points when used with PEST. Use fixed value pilot points, regularization, and multiple parameters.

Prerequisite Tutorials

- MODFLOW – Automated Parameter Estimation

Required Components

- Grid Module
- Geostatistics
- Map Module
- MODFLOW
- Inverse Modeling

Time

- 45-65 minutes



1	Introduction	2
1.1	Getting Started	3
2	Importing the Project	3
3	Creating Pilot Points	5
4	Editing the HK parameter.....	7
4.1	Editing the Parameters.....	7
4.2	Limiting the Number of Parameter Estimation Runs.....	8
5	Saving the Project and Running PEST	8
5.1	Viewing the Solution.....	9
5.2	Viewing the Final Hydraulic Conductivity.....	10
6	Adding Fixed Value Pilot Points	12
6.1	Saving the Project and Running PEST	13
6.2	Changing the Regularization Option	14
6.3	Saving the Project	14
6.4	Prior Information Equations	14
6.5	Running PEST.....	15
7	Multiple Parameters using Pilot Points.....	15
7.1	Creating a Second Set of Pilot Points.....	15
7.2	Creating the New HK Parameter	17
7.3	Using Pilot Points with RCH Parameter.....	18
7.4	Saving the Project and Running PEST	19
8	A Note on Highly Parameterized Models.....	20
9	Conclusion.....	20

1 Introduction

Pilot points can be thought of as a 2D scatter point set. Instead of creating a zone and having the inverse model estimate one value for the entire zone, the value of the parameter within the zone is interpolated from the pilot points. Then the inverse model estimates the values at the pilot points. Using pilot points, values will vary from cell to cell. When the inverse model runs, the values at the pilot points are adjusted and reinterpolated to the grid cells until the objective function is minimized.

PEST provides an option for the pilot point method called regularization. Regularization imposes an additional measure of constraint to the parameter being interpolated. This constraint is imposed by providing PEST with additional information about the parameter in the form of prior information equations. This constraint makes the inversion process much more stable and makes it possible to violate one of the typical constraints associated with parameter estimation: namely, the requirement that the number of parameters must be less than the number of observations.

With regularization, the number of parameters can greatly exceed the number of observations. As a result, complex hydraulic conductivity distributions can be defined, resulting in extremely low residual error. The pilot point method with regularization is an incredibly powerful feature of PEST.

There are two methods available in GMS for defining the prior information equations for PEST. The two methods can be used simultaneously but are usually used separately. The first method is preferred homogeneous regularization. When this option is selected, the

prior information equations written to the PEST control file relate the pilot points to one another. These equations indicate to PEST that—in the absence of any strong influence from the PEST objective function—pilot points that are near to one another should have about the same value.

The second method of regularization available in GMS is preferred value regularization. When this option is selected, prior information equations written to the PEST control file relate the pilot points to their starting value. These equations indicate to PEST that—in the absence of any strong influence from the PEST objective function—the pilot point values should be equal to their starting value. Depending on the particular problem being solved, one method may be preferable over the other.

The model to be calibrated in this tutorial is the same model featured in the “MODFLOW – Model Calibration” tutorial. The model includes observed flow data for the stream and observed heads at a set of scattered observation wells. The conceptual model for the site consists of a set of recharge and hydraulic conductivity zones. These zones will be marked as parameters and an inverse model will be used to find a set of recharge and hydraulic conductivity values that minimize the calibration error.

This tutorial will discuss and demonstrate the following:

1. Opening a MODFLOW model and solution.
2. Creating pilot points and running PEST.
3. Loading optimal parameter values and viewing the resulting HK field.
4. Including pilot points with fixed values and running PEST.
5. Changing regularization options and running PEST.
6. Using pilot points on different zones and different parameter types.


1.1 Getting Started

Do the following to get started:

1. If necessary, launch GMS.
2. If GMS is already running, select *File / New* to ensure that the program settings are restored to their default state.

2 Importing the Project

First, import the modeling project:

1. Click **Open**  to bring up the *Open* dialog.
2. Select “Project Files (*.gpr)” from the *Files of type* drop-down.
3. Browse to the *Tutorials\MODFLOW\pilotpoints* directory and select “start.gpr”.

4. Click **Open** to import the project and exit the *Open* dialog. The initial MODFLOW model should appear as in Figure 1.

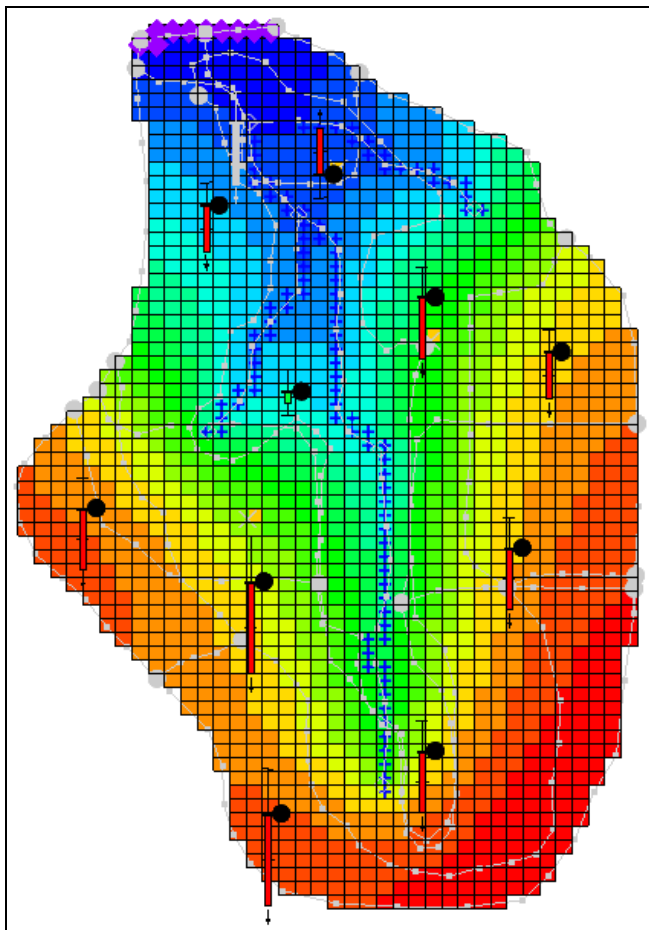


Figure 1 The initial MODFLOW model

5. Right-click in the Project Explorer and select **Expand All**.

A MODFLOW model with a solution and a set of map coverages should be visible (Figure 2). Three of the coverages are the source/sink, recharge, and hydraulic conductivity coverages used to define the conceptual model. The active coverage contains a set of observed head values from observation wells. If switching to the source/sink coverage, notice that an observed flow value has been assigned to the stream network.

This model has already been parameterized, so just create the pilot points and then run PEST.

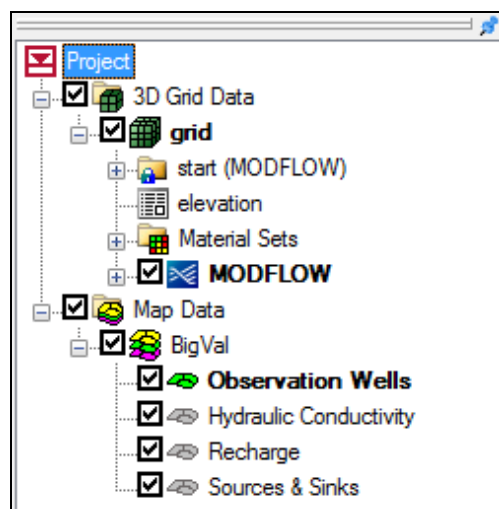




Figure 2 Initial Project Explorer with grid folders collapsed

3 Creating Pilot Points

Now create the pilot points that define the hydraulic conductivity distribution for the model. The pilot points are defined as 2D scatter point sets in GMS. It should be noted that there are many different ways in GMS to create 2D scatter points. Scatter points can be created by converting a 2D Grid, 2D Mesh, TIN, Borehole contacts, or Map data to a scatter point set. The easiest way to create scatter points is to create a new scatter point set and then click out the points in the graphics window.

In this example, a 2D grid will be created and then converted to scatter points. It is necessary to create about 50 pilot points in order to make a cell-centered 2D Grid with 50 cells.

1. In the Project Explorer, right-click on the empty space and select *New / Grid Frame*.
2. In the Project Explorer, right-click on “ Grid Frame” and select **Fit to Active Coverage**.
3. If necessary, resize the grid frame with the **Grid Frame**  tool if the grid frame doesn’t encompass the entire model.

It should appear similar to Figure 3 when done. Now that the coverages and the grid frame are created, it is now possible to create the grid.

4. Select *Feature Objects | Map → 2D Grid* to open the *Create Finite Difference Grid* dialog.
5. In the *X-Dimension* section, enter “5” for the *Number Cells*.
6. In the *Y-Dimension* section, enter “10” for the *Number Cells*.
7. Click **OK** to close the *Create Finite Difference Grid* dialog.

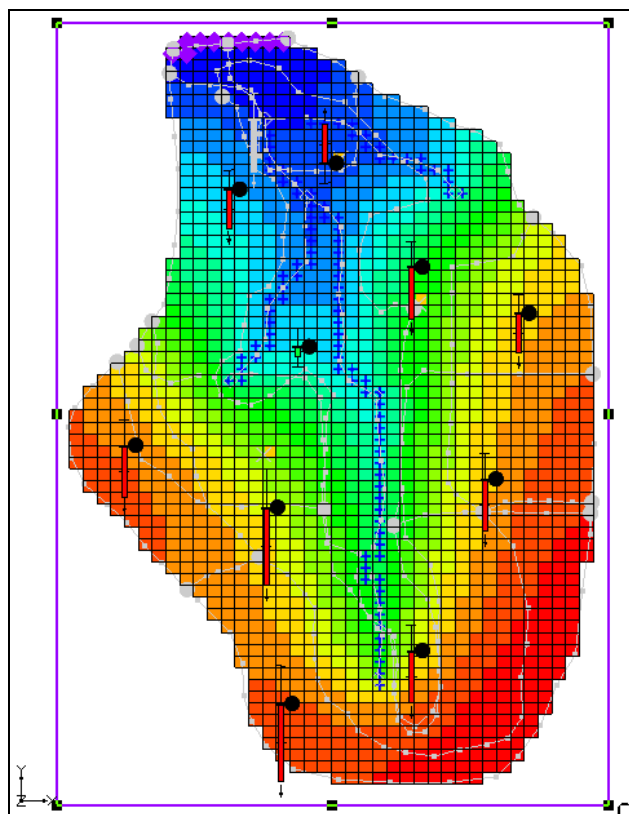







Figure 3 The grid frame should encompass the entire model

The result is a 2D grid with 50 cells. Convert it to 2D scatter points by doing the following:

8. Right-click on the  "grid" item under the "2D Grid Data" folder and select **Convert to | 2D Scatter Points** to bring up the *Scatter Point Set Name* dialog.
9. Enter "HK" as the *New scatter point set name* and click **OK** to close the *Scatter Point Set Name* dialog.
10. Right-click on the  "grid" and select **Delete** to remove the grid.

The default starting value of hydraulic conductivity should be 0.5 m/d, so change the data values at the scatter points to this value.

11. Expand the  "2D Scatter Data" folder and select the  "HK" scatter point set to make it active.
12. Unlock the scatter points by selecting *Scatter Points / Lock All Scatter Points* menu command. This should remove the checkmark to the left of the entry in the menu.
13. Select the **Select Scatter Points**  tool and press *Ctrl-A* to select all of the scatter points.
14. In the XYZF Bar, enter "0.5" in the *F* field and press *Enter* to set the new value.

15. Deselect the points by clicking anywhere outside the model.

The model should appear similar to Figure 4.

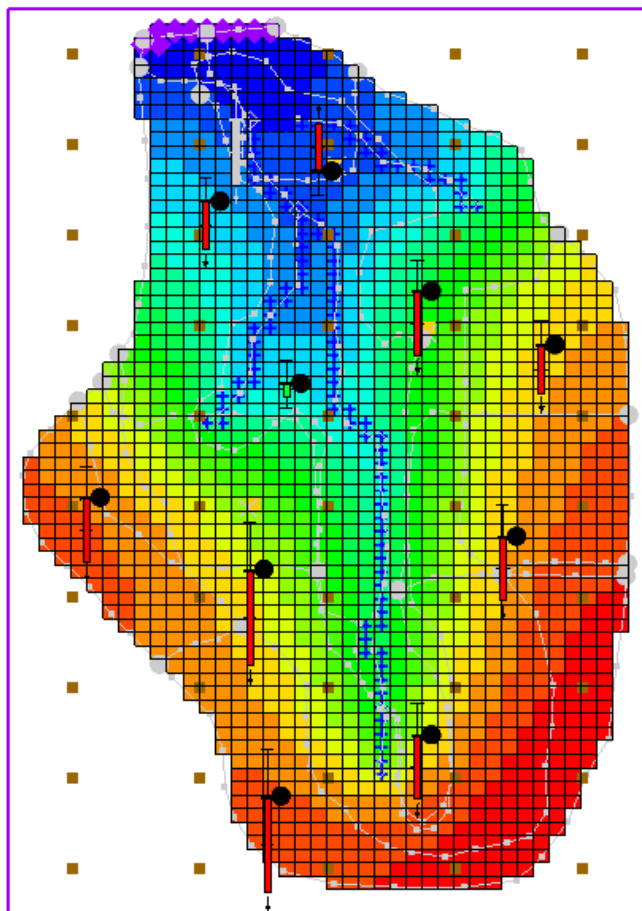


Figure 4 Placement of scatter points


4 Editing the HK parameter



In the “MODFLOW – Automated Parameter Estimation” tutorial, the example had four hydraulic conductivity parameters. For this problem, estimate the hydraulic conductivity for the entire layer with the pilot points. Only one parameter for hydraulic conductivity is needed. This parameter will then be linked to the pilot points using the *Parameters* dialog.


4.1 Editing the Parameters

Now edit the currently defined parameters for MODFLOW.

1. Select *MODFLOW* | **Parameters...** to open the *Parameters* dialog.

2. On the row for the “HK_30” parameter, click the  button in the *Value* column and select “<Pilot points>” from the drop-down.

The interpolation options associated with the pilot points can be changed by clicking on the small  button above the drop-down  button in the *Value* column.

3. Click on the  button in the *Value* column on the “HK_30” row to bring up the *2D Interpolation Options* dialog.

This dialog allows selections of the scatter point set and dataset used with the parameter and the interpolation scheme. The defaults are appropriate in this case, so it's not necessary to change anything.

4. Click **OK** to exit the *2D Interpolation Options* dialog.
5. Click **OK** to exit the *Parameters* dialog.

4.2 Limiting the Number of Parameter Estimation Runs

In the interest of time, this tutorial will limit the number of iterations that PEST does for the problem.

1. Select *MODFLOW / Parameter Estimation...* to bring up the *PEST* dialog.
2. Enter “5” as the *Max number of iterations (NOPTMAX)*.

Notice the *Tikhonov regularization* section of the dialog. This section allows specifying the type of regularization to use with PEST. By default, *Preferred homogeneous regularization* is turned on.


The *Prior information power factor* is used to change the weight applied to the prior information equations for the pilot points. When the prior information equations are created, GMS will compute an inverse distance weight between each pilot point and all other pilot points for a given parameter. This weight is then raised to the power of the *Prior information power factor* and assigned to the equation for a given pair of points. Increase the homogeneity constraint (assign a higher weight to the prior information equation) by decreasing this value. Decrease the homogeneity constraint (assign a lower weight to the prior information equation) by increasing this value.

3. Click **OK** to exit the *PEST* dialog.

5 Saving the Project and Running PEST

Now save and run PEST.

1. Select *File | Save As...* to bring up the *Save As* dialog.
2. Select “Project Files (*.gpr)” from the *Save as type* drop-down.
3. Enter “mfpest_pilot.gpr” as the *File name*.

4. Click **Save** to save the project under the new name and exit the *Save As* dialog.
5. Click **Run MODFLOW**  to bring up the *MODFLOW/PEST Parameter Estimation* dialog.

PEST is now running. The error and parameter values are updated in the spreadsheet in the upper right side of the dialog as the model run progresses. The plot on the left shows a graphical representation of the error. In this case, there may be some strange parameter names like *sc1v1*. These names were automatically generated and assigned to the pilot points.

PEST may take several minutes to run, depending on the speed of the computer being used. The residual error should decrease with each iteration. When PEST is finished, a message will appear in the text portion of the window and the **Abort** button will change to **Close**.

5.1 Viewing the Solution

Once PEST is finished, it is possible to import the solution.

1. Turn on *Read solution on exit* and *Turn on contours (if not on already)*.
2. Click **Close** to exit the *MODFLOW/PEST Parameter Estimation* dialog.

The model should appear similar to Figure 5. The contours shown on the 3D grid are the heads from the MODFLOW run with the optimum parameter values.

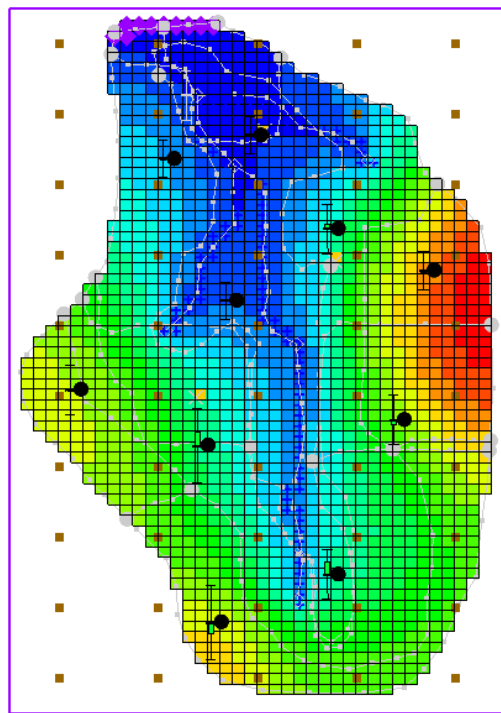






Figure 5 View of the solution after initial MODFLOW/PEST run

Now look at the observation targets in the map model and the error associated with this model run.


3. In the Project Explorer, turn off the “3D Grid Data” folder in order to see the coverage data better.
4. Select the “ Sources & Sinks” coverage from the Project Explorer. Notice that the observation target on the arc group almost exactly matches.
5. Using the **Select Arc Group**  tool, select the river arc group by clicking on the river arc. Notice in the edit strip at the bottom of the graphics window the computed and observed flow is reported.
6. Select the “ Observation Wells” coverage from the Project Explorer to see how closely the computed heads match the field observations.
7. Right-click on the “ mfpest_pilot (MODFLOW)” solution in the Project Explorer and select **Properties...** to open the *Properties* dialog.

This dialog contains a spreadsheet showing the error from this model run. The spreadsheet shows the error from the head observations, the flow observations, and the combined weighted observations. Note that these values are lower than the values obtained using the zonal parameters approach.



8. When finished viewing the properties, click **Done** to close the *Properties* dialog.

5.2 Viewing the Final Hydraulic Conductivity



When PEST ran a new conductivity calculation, a value was estimated at each of the scatter points used with the “HK_30” parameter. Now import the optimal parameter values as determined by PEST. Importing the optimal parameter values will create a new dataset for the scatter point set. The final hydraulic conductivity field will then be seen.

1. Turn on the “3D Grid Data” folder in the Project Explorer.
2. Select *MODFLOW / Parameters...* to open the *Parameters* dialog.
3. Click **Import Optimal Values** to bring up the *Open* dialog.
4. Select “PAR File (*.par;*.bpa)” from the drop-down  to the right of the *File name* field.
5. Browse to the *Tutorials\MODFLOW\pilotpoints\mfpest_pilot_MODFLOW* directory and select “mfpest_pilot.par”.
6. Click **Open** to exit the *Open* dialog.

Notice that the starting values for the parameters have changed.

7. Click the  button above the drop down  in the *Value* column for parameter “HK_30” to bring up the *2D Interpolation Options* dialog.

Notice that “HK_30 (mfpest_pilot)” is selected in the *Dataset* drop-down. This dataset was imported when the optimal values were imported, and it represents the optimal values at each pilot point as determined by PEST.

8. Click **OK** to exit the *2D Interpolation Options* dialog.
9. Click **OK** to exit the *Parameters* dialog.
10. Expand the “ MODFLOW” item in the Project Explorer and select “HK” under the “ LPF” package.

The final hydraulic conductivity values for the MODFLOW simulation should now be visible (Figure 6).

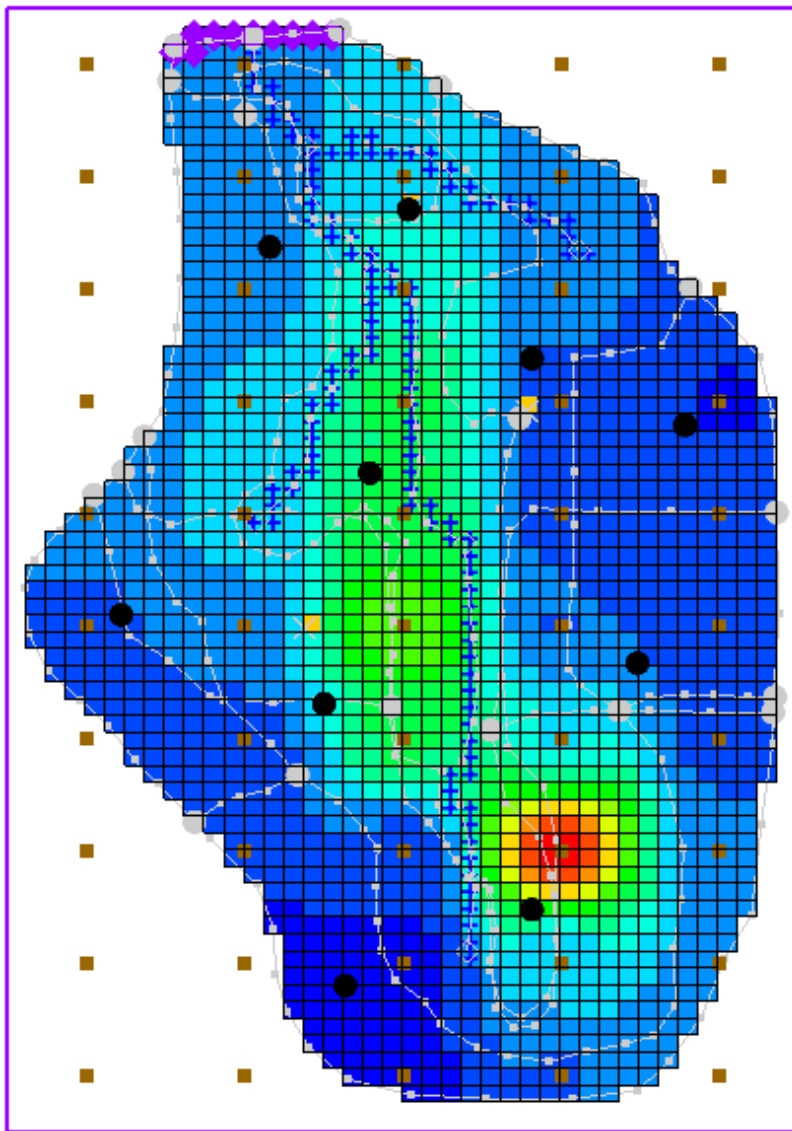





Figure 6 Showing the final hydraulic conductivity values

6 Adding Fixed Value Pilot Points

Pilot points can be supplemented by field measured hydraulic conductivity values (such as pump test data values). Now add additional pilot points to the model and fix the HK value at those points. First, it is necessary to change the display so it is possible to more easily see the grid.

1. Click **Display Options**  to bring up the *Display Options* dialog.
2. Select “3D Grid Data” from the list on the left.
3. On the *3D Grid* tab in the *Active dataset* section, turn off *Contours*.
4. Click **OK** to close the *Display Options* dialog.

Notice that there are 3 pumping wells in the model (Figure 7). For purposes of illustration, assume that a pump test was performed at each of these wells and that the HK was estimated. Create a pilot point at each of these wells.

5. Select the “ 2D Scatter Data” folder in the Project Explorer to make it active.
6. Using the **Create Scatter Points**  tool, create a scatter point at each of the pumping wells as shown in Figure 7 (the center of each green circle).

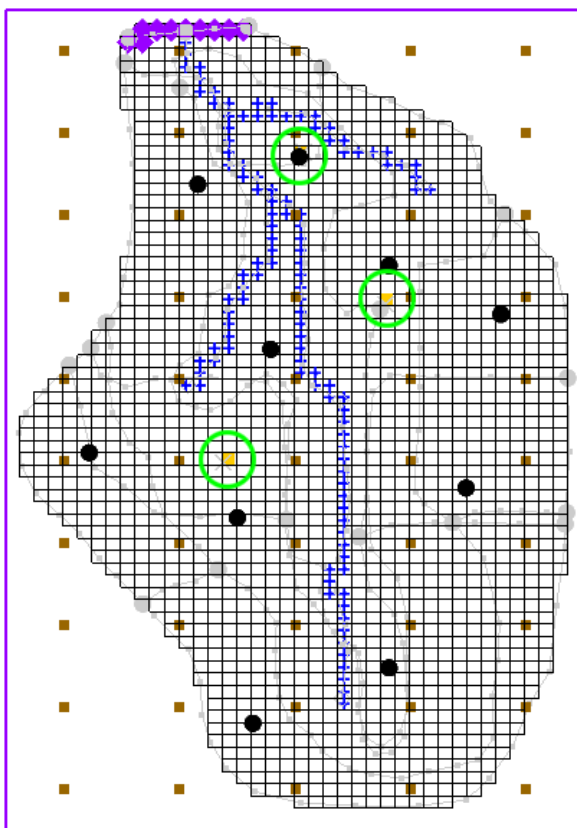




Figure 7 Location of pumping wells

7. Make sure the *Scatter Points* / **Lock All Scatter Points** menu command is not checked.
8. Using the **Select Scatter Points**  tool, select the new scatter point for the well closest to the top of the model. Turning off the 3D Grid in the Project Explorer makes the new scatter points more visible.
9. In the XYZF Bar, enter “1.0” in the *F* field and press *Enter* to set the new value.
10. Select the scatter point at the well on the east (right) side of the model and enter “0.1” in the *F* field. Press *Enter* to set the new value.
11. Select the scatter point at the well on the west (left) side of the model and enter “5.0” in the *F* field. Press *Enter* to set the new value.
12. Now select all three of the new scatter points by holding *Shift* while selecting each one, then select *Edit* / **Properties...** to open the *Properties* dialog.
13. In the *All* row, check the box in the *Fixed Pilot Point* column.
14. Click **OK** to exit the *Properties* dialog.

6.1 Saving the Project and Running PEST

It is now possible to save and run PEST.

1. Select *File* | **Save As...** to bring up the *Save As* dialog.
2. Select “Project Files (*.gpr)” from the *Save as type* drop-down.
3. Enter “mfpest_pilot_fixed.gpr” as the *File name* and click **Save** to exit the *Save As* dialog.
4. Click **Run MODFLOW**  to bring up the *MODFLOW/PEST Parameter Estimation* dialog.

PEST may take several minutes to run depending on the speed of the computer being used. Once PEST is finished, import the solution.

5. Turn on *Read solution on exit* and *Turn on contours (if not on already)*.
6. Click **Close** to exit the *MODFLOW/PEST Parameter Estimation* dialog.
7. View the new HK field by importing the optimal values and examining the contours as was done in steps 1-6 of section 5.2, above. For step 5, use the “mfpest_pilot_fixed.par” file in the
\\Tutorials\\MODFLOW\\pilotpoints\\mfpest_pilot_fixed_MODFLOW directory.
8. Click **OK** to close the *Parameters* dialog.

6.2 Changing the Regularization Option

Now change the regularization option to use the *Preferred value regularization* method.

1. Select **MODFLOW / Parameter Estimation** to open the *PEST* dialog.
2. In the *Tikhonov regularization (only use with pilot points)* section, turn off *Preferred homogeneous regularization*.
3. Turn on *Preferred value regularization*.
4. Select **OK** to close the *PEST* dialog.

6.3 Saving the Project

Now save the project.

1. Select **File | Save As...** to bring up the *Save As* dialog.
2. Select “Project Files (*.gpr)” from the *Save as type* drop-down.
3. Enter “mfpest_pilot_pref_val.gpr” as the *File name*.
4. Click **Save** to close the *Save As* dialog.

6.4 Prior Information Equations

Compare the different prior information equations written from GMS by looking at the RPF files in the MODFLOW directories. The prior information equations for *Preferred homogeneous regularization*, found in “mfpest_pilot.rpf”, should look similar to Figure 8.

```
pi0 1.0 * log(sc1v1) - 1.0 * log(sc1v2) = 0.0 0.001251088578 regul_1
pi1 1.0 * log(sc1v1) - 1.0 * log(sc1v3) = 0.0 0.0014852822049 regul_1
pi2 1.0 * log(sc1v1) - 1.0 * log(sc1v4) = 0.0 7.48949022e-006 regul_1
pi3 1.0 * log(sc1v1) - 1.0 * log(sc1v5) = 0.0 5.69586969e-006 regul_1
```

Figure 8 Prior information equations from preferred homogeneous regularization


Notice that these equations define a relationship between the different pilot points. In addition, the weight applied to these equations changes as shown by the last number written to each line. In contrast, the prior information equations for *Preferred value regularization*, found in “mfpest_pilot_pref_val.rpf” as shown in Figure 9, have the same weight applied and define a preferred value for each point.

```
pi0 1.0 * log(sc1v1) = -1.313978552818 1.0 regul_1
pi1 1.0 * log(sc1v2) = -1.870689034462 1.0 regul_1
pi2 1.0 * log(sc1v3) = -1.130823969841 1.0 regul_1
pi3 1.0 * log(sc1v4) = -1.1475918293 1.0 regul_1
```

Figure 9 Prior information equations from preferred value regularization

6.5 Running PEST

Now run PEST.




1. Click **Run MODFLOW**  to bring up the *MODFLOW/PEST Parameter Estimation* dialog.

PEST may take several minutes to run, depending on the speed of the computer being used. Once PEST is finished, import the solution.

2. Turn on *Read solution on exit* and *Turn on contours (if not on already)*.
3. Click **Close** to exit the *MODFLOW/PEST Parameter Estimation* dialog.
4. View the new HK field by importing the optimal values and examining the contours as was done in steps 1-6 of section 5.2, above. For step 5, use the “mfpest_pilot_pref_val.par” file in the
\\Tutorials\\MODFLOW\\pilotpoints\\mfpest_pilot_pref_val_MODFLOW
directory.
5. Click **OK** to close the *Parameters* dialog.

7 Multiple Parameters using Pilot Points

In GMS, pilot points can be used with HK and RCH parameters. Multiple HK (or RCH) parameters that use the same or different pilot points can exist. Create a second HK parameter and a new set of pilot points.

1. In the Project Explorer, turn off the “3D Grid Data” folder.
2. Select the “ Hydraulic Conductivity” coverage to make it active.
3. Using the **Select Polygons**  tool, double-click the polygon surrounding the river in the middle of the model to bring up the *Attribute Table* dialog.
4. Enter “-60.0” in the *Horizontal K (m/d)* column and click **OK** to close the *Attribute Table* dialog.
5. Right-click on “ Hydraulic Conductivity” and select *Map To / MODFLOW/MODPATH*.

7.1 Creating a Second Set of Pilot Points

Now create another scatter point set for the new HK parameter by creating a 2D grid and converting it to a scatter point set.

1. In the Project Explorer, right-click on the empty space and select *New / 2D Grid...* to open the *Create Finite Difference Grid* dialog.

2. In the *X-Dimension* section, enter “2240.0” for the *Origin*, “4075.0” for the *Length*, and “3” for the *Number of cells*.
3. In the *Y-Dimension* section, enter “700.0” for the *Origin*, “11100.0” for the *Length*, and “5” for the *Number of cells*.
4. In the *Z-Dimension* section, enter “0.5” as the *Origin*. This value will be assigned to the scatter points created from the grid.
5. In the *Orientation/type* section, select “Cell centered” from the *Type* drop-down. The dialog should appear similar to Figure 10.

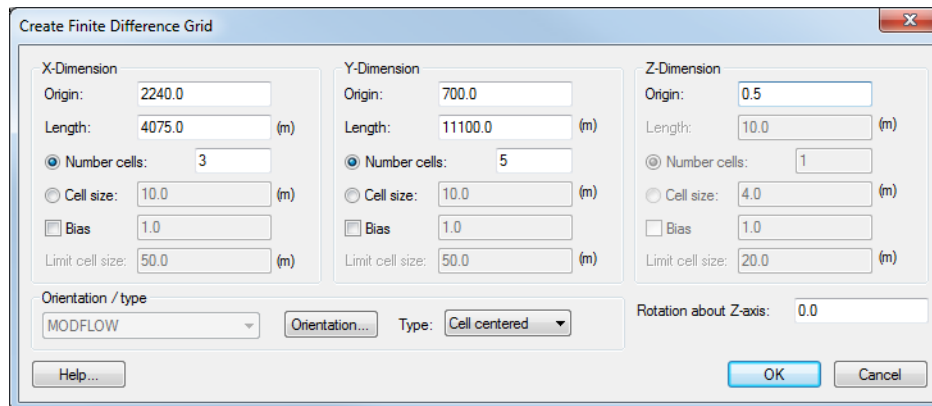


Figure 10 Create Finite Difference Grid dialog

6. Click **OK** to close the *Create Finite Difference Grid* dialog.
7. Right-click on the “grid” under the “2D Grid Data” folder and select *Convert to / 2D Scatter Points* to bring up the *Scatter Point Set Name* dialog.
8. Enter “HK_60” as the *New scatter point set name* and click **OK** to close the *Scatter Point Set Name* dialog.
9. Right-click on the same “grid” item and select **Delete**.

The new scatter points should appear interspersed with the previous scatter points (Figure 11). Feel free to turn on and off each set of scatter points to more clearly see their locations.

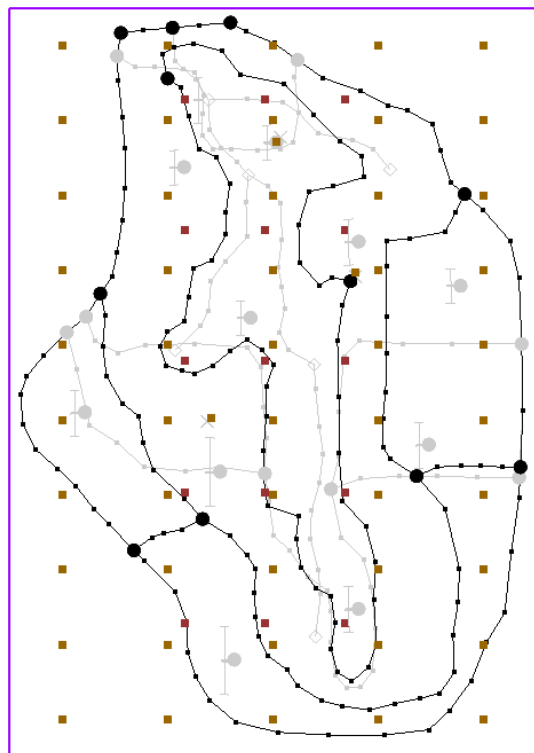





Figure 11 Both scatter point sets interspersed

7.2 Creating the New HK Parameter

Now create a new parameter for the newly created pilot points.



1. Select *MODFLOW / Parameters...* to open the *Parameters* dialog.
2. Click **Initialize From Model**.

Notice that a line for “HK_60” is added to the bottom of the list of parameters.

3. Check the boxes in the *Param. Est. Solve* and *Log Xform* columns on the “HK_60” row.
4. Select “<Pilot points>” from the drop-down  in the *Value* column on the “HK_60” row.
5. Click on the  button above the drop-down  in the *Value* column for parameter “HK_60”. This will open the *2D interpolation Options* dialog.
6. In the *Interpolating from* section, select “HK_60 (active)” from the *Object* drop-down.
7. Click **OK** to exit the *2D interpolation Options* dialog.
8. Click **OK** to exit the *Parameters* dialog.


7.3 Using Pilot Points with RCH Parameter

Use pilot points to estimate recharge with the model. For the RCH parameter, use the same set of pilot points that the “HK_30” parameter uses, but create a new dataset with starting values for the RCH parameter.

1. Right-click the “ Recharge” coverage and select **Attribute Table...** to bring up the *Attribute Table* dialog.
2. Select “Polygons” from the *Feature type* drop-down.
3. In the *All* row, enter “-150.0” in the *Recharge rate (m/d)* column.
4. Click **OK** to close the *Attribute Table* dialog.
5. Right-click on the “ Recharge” coverage and select *Map To / MODFLOW/MODPATH*.




Creating New Starting Values for the RCH Parameter

Now create a new dataset on the HK scatter set to provide the starting values for the RCH parameter.

1. Select the “ HK” scatter point set in the Project Explorer to make it active.
2. Select *Edit / Dataset Calculator* to bring up the *Data Calculator* dialog.
3. Enter “1e-5” in the *Expression* field.
4. Enter “RCH” in the *Result* field.
5. Click **Compute** to create a new dataset with all values equal to “1.0e-5”.
6. Click **Done** to exit the *Data Calculator* dialog.

Editing the RCH Parameters

Now edit the RCH parameters to use pilot points.

1. Select *MODFLOW / Parameters...* to bring up the *Parameters* dialog.
2. Click on “RCH_180” in the *Name* column and click **Delete**.
3. Repeat step 2 for the “RCH_210” parameter row.
4. In the *Value* column for the “RCH_150” row, click the drop-down  and select “<Pilot points>”. This turns on the pilot points option for this parameter.
5. Click on the  button above the drop down  in the *Value* column to bring up the *2D Interpolation Options* dialog.
6. In the *Interpolating from* section, select “HK (active)” from the *Object* drop-down, and “RCH” from the *Dataset* drop-down.


7. Click **OK** to close the *2D Interpolation Options* dialog.
8. Click **OK** to close the *Parameters* dialog.

7.4 Saving the Project and Running PEST

Now save and run PEST.

1. Select *File* | **Save As...** to bring up the *Save As* dialog.
2. Select “Project Files (*.gpr)” from the *Save as type* drop-down.
3. Enter “mfpest_pilot_2zones.gpr” as the *File name*.
4. Click **Save** to close the *Save As* dialog.

When pilot points are assigned to both HK and RCH parameters, the prior information equations for the HK and RCH parameters are assigned to different regularization groups. This helps PEST to differentiate weighting among pertinent prior information equations. In other words, PEST works better with this option.

5. Click **Run MODFLOW**  to bring up the *MODFLOW/PEST Parameter Estimation* dialog.

PEST may take several minutes to run, depending on the speed of the computer being used. Once PEST is finished, import the solution.

6. Turn on *Read solution on exit* and *Turn on contours (if not on already)*.
7. Click **Close** to exit the *MODFLOW/PEST Parameter Estimation* dialog.
8. View the new HK field by importing the optimal values and examining the contours as was done in steps 1-6 of section 5.2, above. For step 5, use the “mfpest_pilot_2zones.par” file in the
\\Tutorials\\MODFLOW\\pilotpoints\\mfpest_pilot_2zones_MODFLOW
directory.
9. Click **OK** to close the *Parameters* dialog.

The solution should appear similar to Figure 12. Feel free to compare the four solutions by alternating between them in the Project Explorer.

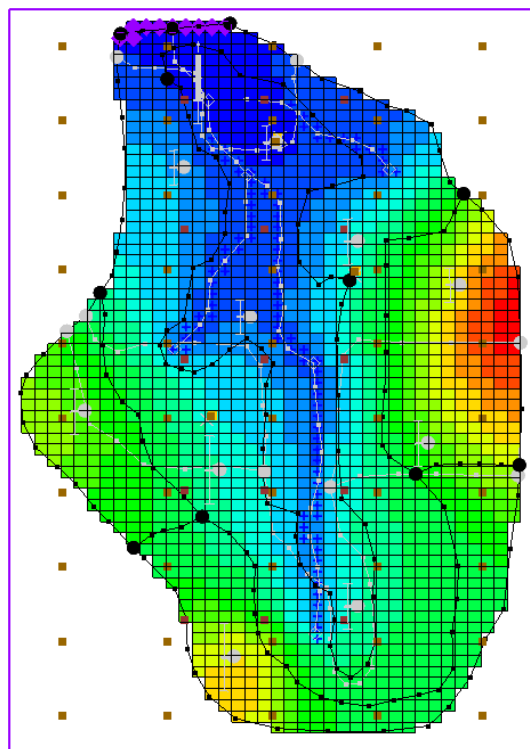




Figure 12 After the final run

8 A Note on Highly Parameterized Models

The model that was just created has over 100 parameters. This is a fairly simple MODFLOW model that converges rather quickly. Most real world problems take longer to run, so it may not be practical to run MODFLOW over 100 times for each PEST iteration. However, PEST supports a very innovative method known as SVD-Assist which can dramatically reduce the number of model runs required for each PEST iteration. When combining SVD-Assist with Parallel PEST, it becomes practical to use PEST with models containing hundreds or even thousands of parameters. Learn more about these methods in the “MODFLOW – Advanced PEST” tutorial.

9 Conclusion

This concludes the “MODFLOW – PEST Pilot Points” tutorial. The following key topics were discussed and demonstrated:

- When using pilot points, there may be more parameters than observations because regularization is included in the parameter estimation.
- In the MODFLOW *Parameters* dialog, change a parameter to use pilot points by using the  and  buttons.
- 2D scatter points can be used to create pilot points in GMS.